

# SLIDING ROOF SWITCH ASSEMBLY

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. **REMOVE MAP LIGHT ASSEMBLY**

- (a) Using a clip remover, detach the 4 clips and remove the light.

**HINT:**

Tape the clip remover tip before use.

- (b) Disconnect the map light connector.

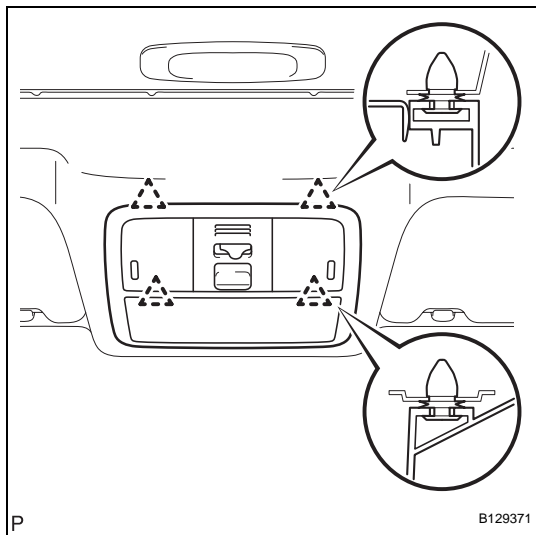

RF

## INSPECTION

### 1. INSPECT MAP LIGHT ASSEMBLY


- (a) Measure the resistance of the switch.

#### Standard resistance

Switch Condition	Tester Connection	Specified Condition
TILT UP	8 (UP) - 7 (GND)	Below 1 $\Omega$
TILT DOWN	9 (DOWN) - 7 (GND)	Below 1 $\Omega$
SLIDE CLOSE	8 (UP) - 7 (GND)	Below 1 $\Omega$
SLIDE OPEN	9 (DOWN) - 7 (GND)	Below 1 $\Omega$

If the result is not as specified, replace the map light assembly.

RF

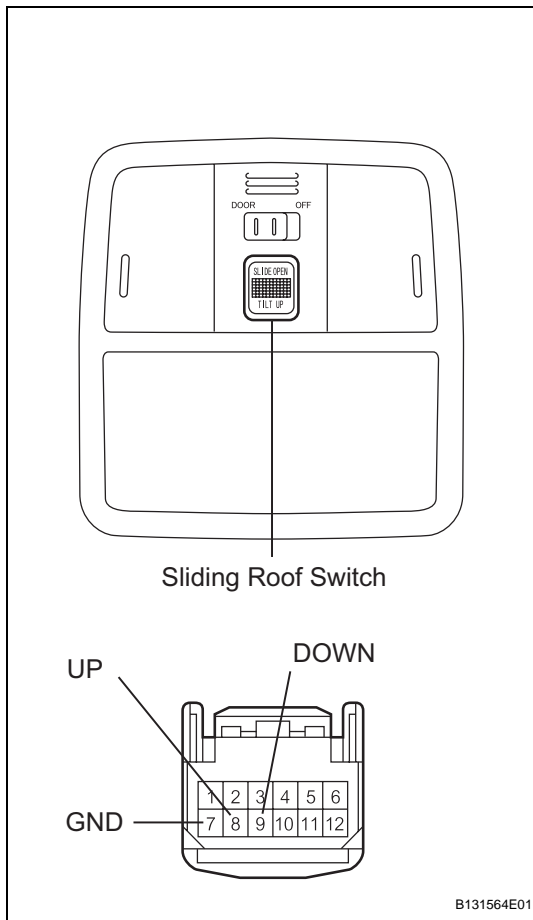

## INSTALLATION

### 1. INSTALL MAP LIGHT ASSEMBLY

- (a) Connect the map light connector.  
(b) Attach the 4 clips to install the map light.

### 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

